

HYDROFLASH LA



installation instructions

version 10152026



HYDROFLASH® LA INSTALLATION INSTRUCTIONS

LIQUID-APPLIED SILL APPLICATION WITH A MECHANICALLY ATTACHED WRB

- Wrap the entire building including window and door openings using a Benjamin Obdyke Weather Resistive Barrier (WRB).
- At each window opening, cut a “Modified I” shape into the housewrap. Cut housewrap above the top corners 45 degrees away from the window opening to account for flashing width.
- Fold jambs, sill, and header and temporarily fasten, prepping for window install.

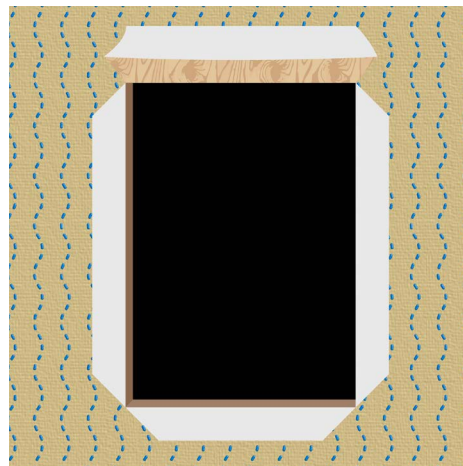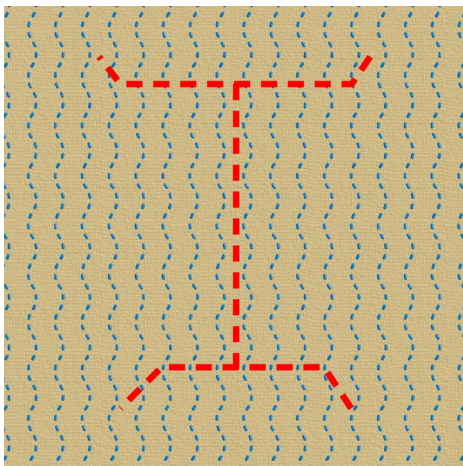



- (optional) Install back dam or sloped sill (optimal slope .25"), except when using approved pre-manufactured sill pan.
- To properly wet set the sill and jamb, apply a bead of HydroFlash LA to sill and use hand applicator to apply 20-40 mil thickness on sill and 6 inches up each jamb. Apply a minimum of 2 inches of HydroFlash LA from exterior face of sill and jamb.

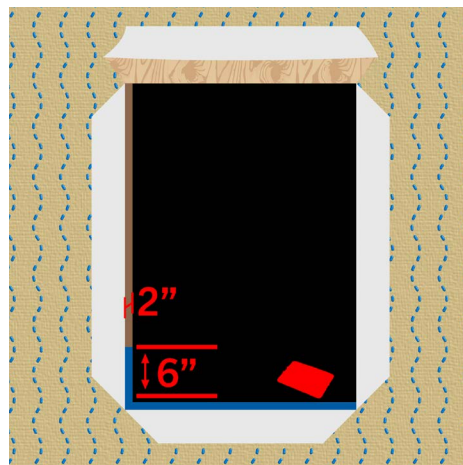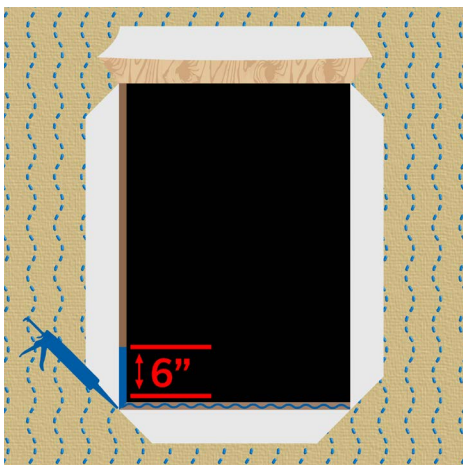



HYDROFLASH® LA INSTALLATION INSTRUCTIONS

LIQUID-APPLIED SILL APPLICATION WITH A MECHANICALLY ATTACHED WRB

- Fold the jamb and sill flaps on the applied HydroFlash LA and smooth with an applicator. Fasten the WRB to the top of the jamb.
- At each window opening, apply a bead of HydroFlash LA to the sill and 6 inches up each jamb.

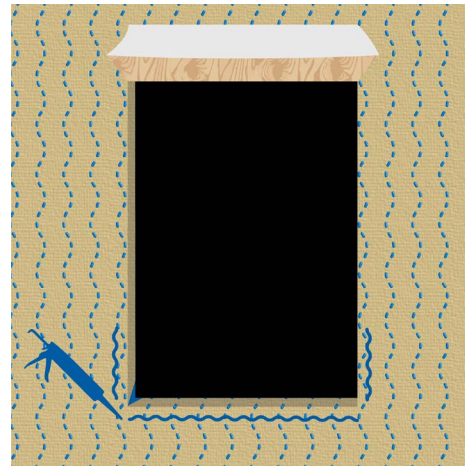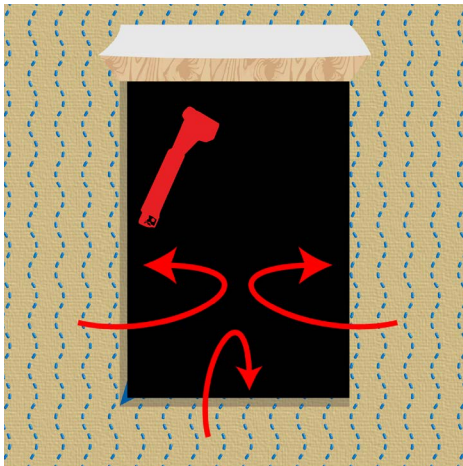



- To properly wet set the sill and jamb, apply a bead of HydroFlash LA to sill and use hand applicator to apply 20-40 mil thickness on sill and 6 inches up each jamb. Apply a minimum of 2 inches of HydroFlash LA into the rough opening and onto the face of the WRB.

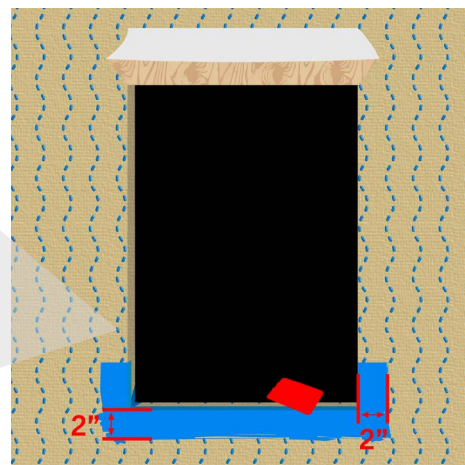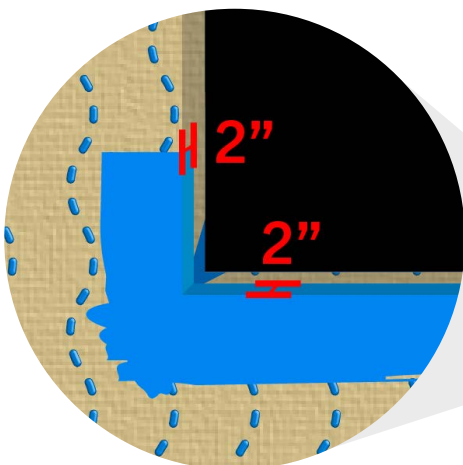

HYDROFLASH® LA INSTALLATION INSTRUCTIONS

LIQUID-APPLIED SILL APPLICATION WITH A MECHANICALLY ATTACHED WRB

- (optional) Install HydroCorner on top of the freshly applied HydroFlash LA and allow to wet-set to the corners of each sill.
- Once the HydroFlash LA sill pan is tack free, apply a bead of HFLA at jambs and head. Do not caulk at the window sill. (Confirm with window manufacturer.) Then you may place the nail-fin window into the opening.
- (optional) Install “U” shaped shims behind bottom nailing-fin to promote drainage to exterior and prevent adhesion to nailing fin.

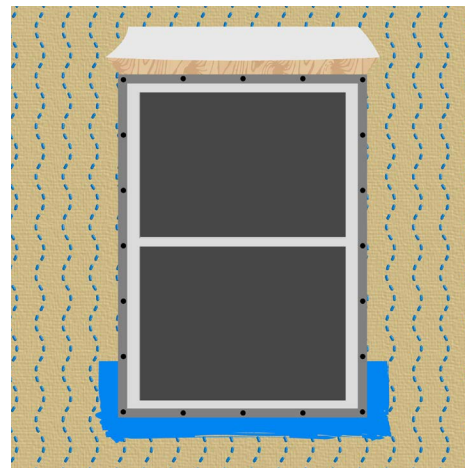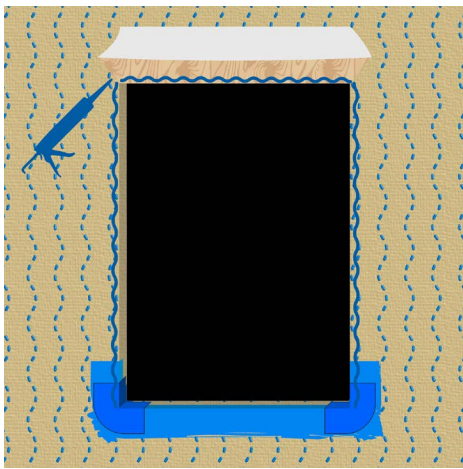

- Install HydroFlash to the side jambs. Surface should be clean and dry, and self-adhered flashing should be applied with firm pressure using a hand applicator.
- Apply HydroFlash to the top nailing flange and directly to the sheathing. Install drip cap.
- Fold top flap down on top of the flashed header and apply HydroFlash at diagonal relief cuts.

